

# DPS Spreader Bar

(Used with Maxi Sky 600 Lifts)

## Instructions for Use

**ARJOHUNTLEIGH**  
GETINGE GROUP



#### Design Policy and Copyright

® and ™ are trademarks belonging to the ArjoHuntleigh group of companies.

© ArjoHuntleigh 2016.

As our policy is one of continuous improvement, we reserve the right to modify designs without prior notice. The content of this publication may not be copied either whole or in part without the consent of ArjoHuntleigh.

# Table of Contents

Symbols .....	4
Technical Data .....	5
Safety Instructions and Warnings.....	6
Assembling the DPS .....	7
Restrictions: .....	7
Assembling the Dynamic Positioning System Spreader Bar .....	7
Installation of the DPS Spreader Bar Interconnection System into the Maxi Sky 600 lift.....	8
Installation of the DPS Spreader Bar on the Maxi Sky 600 Lift .....	10
Positioning the DPS spreader bar on the Maxi Sky 600 lift.....	11
Operating the DPS Spreader Bar .....	12
Sling Attachment .....	13
Straight Attachment .....	13
Crossed Attachment .....	13
Maintenance and Cleaning.....	14
WARNING:.....	14
Daily Check List .....	14
Inspection and Cleaning.....	14
Annual Inspection.....	14
Troubleshooting .....	15
Log Book .....	16

# Symbols


---


<b>WARNING:</b> A warning is intended to alert the user from hazards or unsafe practices which could result in serious bodily harm.	<b>CAUTION:</b> A caution is intended to alert the user of the presence of important operating and maintenance instructions which could prevent product damage or possible personal injury.
---	---

<b>NOTE:</b> A note offers helpful information concerning certain operating procedures.
---

<b>WARNING:</b>	<p>DO NOT ATTEMPT TO USE THIS EQUIPMENT WITHOUT UNDERSTANDING THIS MANUAL.</p> <p><b>To ensure safe operation, read carefully the entire manual, especially the section on "Safety Instructions and Warnings", before installing, operating or servicing this equipment.</b></p> <p>If something is not completely understood, please contact your supplier for more details. Failure to comply with warnings in this manual may result in injury.</p> <p><b>Keep this manual with lift and refer to it as required. Contents of this manual are subjected to change without prior notice to users.</b></p>
-----------------	---

# Technical Data

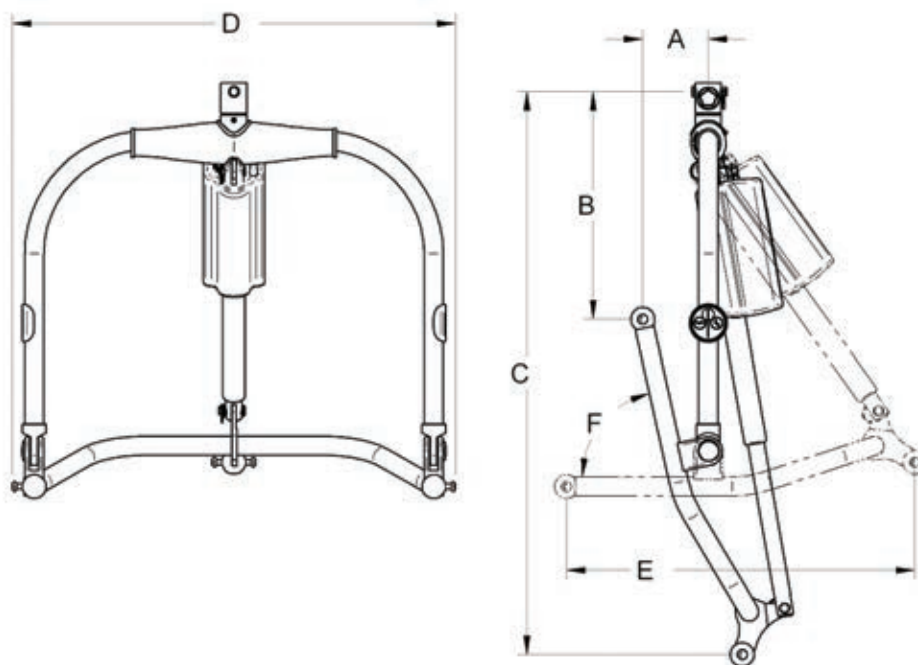

DIMENSIONS				
	DPS position:			
	SITTING		LYING	
	mm	in	mm	in
A	90	3,5	190	7,5
B	305	12	527	20.8
C	639	251	495	19.5
	mm		in	
D	590		23.2	
E	465		18.3	
F	77°			
				

WEIGHT DATA		
Description	kg	lb
DPS spreader bar	7	15
Shipping	9	20

TECHNICAL DATA		
Description	kg	lb
Safe working load (SWL)	272	600
IP rating	IP65	
Control voltage output (Vdc)	24	
Current limiting (Amp.)	5	
Fuse size (Amp.)	5	
Duty Cycle 10%	6 min/h	
Sound power level ( dBA )	40	

ENVIRONMENTAL CONDITIONS: Normal operation: 10 °C to 40 °C, 0% to 90% R.H., 700-1060hPa.  
Equipment is not suitable for use in the presence of flammable anaesthetic mixture with air or with nitrous oxide.  
Equipment classification with respect to protection from electric shock: internally powered.  
Degree of protection against electric shock: Type BF applied parts

001.19040:EN rev. 7

# Safety Instructions and Warnings

---

- IMPORTANT – READ THESE INSTRUCTIONS CAREFULLY OR SERIOUS INJURY MAY RESULT.
- KEEP THESE INSTRUCTIONS WITH THE PRODUCT AT ALL TIMES.
- READ AND UNDERSTAND OPERATING AND MAINTENANCE INSTRUCTIONS IN THIS MANUAL BEFORE INSTALLING, OPERATING, OR SERVICING THIS EQUIPMENT.
- This equipment MUST ONLY be installed by personnel qualified to do so.
- ArjoHuntleigh spreader bars MUST be installed by an authorized contractor or installer.
- ONLY a qualified technician or installer can remove and reinstall the spreader bar on the lift.
- Your spreader bar is for transferring patients only. DO NOT use it for any other purpose.
- ALWAYS carry out the daily checklist before using the spreader bar.
- ArjoHuntleigh DPS spreader bar is specifically designed for ArjoHuntleigh ceiling lift systems, slings and accessories. Accessories designed by any other manufacturer are prohibited and will prevent ArjoHuntleigh from being able to guarantee a safe transfer. USE ONLY ArjoHuntleigh spreader bars and accessories to maintain patient safety and product utility.
- ArjoHuntleigh DPS spreader bar is intended to be used for patients within the specified weight limit indicated for the lift. DO NOT attempt to lift more than the weight limit indicated.
- Before attempting to transfer, the patient MUST be assessed by a qualified professional.
- ArjoHuntleigh ceiling lifts and DPS spreader bars MUST be used by a caregiver with proper training to work with the patient to be transferred. This patient lift SHOULD NEVER be used by patients on their own.
- ONLY trained and qualified caregivers should transfer a patient. DO NOT attempt to use the lift and the DPS spreader bar if you have not been properly trained to do so.
- ALWAYS be prepared before attempting to transfer a patient.
- DO NOT use a sling that is not recommended for the lift and DPS spreader bar.
- DO NOT drop the DPS spreader bar. Dropping the DPS spreader bar may cause internal damage that is not easily seen. If the DPS spreader bar is suspected to be damaged, contact an authorized technician for servicing.
- IMPORTANT: Keep all components of the DPS spreader bar clean and dry, and have electrical and mechanical safety checkpoints done as instructed in the "Maintenance" section of this manual.
- AVOID violent impact during transportation.

# Assembling the DPS


---

## Restrictions


- The DPS spreader bar fits on all standard Maxi Sky 600 lifts with serial #LDXXXX16000.
- Serial numbers below #LDXXXX16000 require a cab adaptor kit #700.14500.33.
- The DPS spreader bar cannot be installed on a Maxi Sky 600 lift equipped with an infra-red hand control.
- The DPS spreader bar is sold separately.

## Assembling the Dynamic Positioning System Spreader Bar

1. Remove the DPS spreader bar from the carton and inner boxes.
2. Check for any shipping damage. Do not discard carton or packing material until you are completely sure there is no damage to the lift.
3. Unfold the DPS spreader bar.

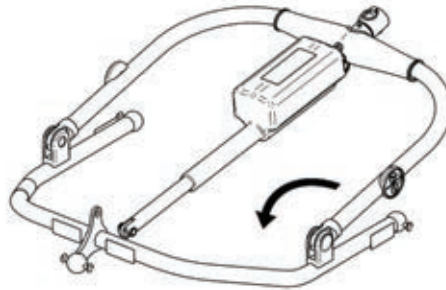


4. Attach the actuator as shown below using the supplied clevis pin and split ring.

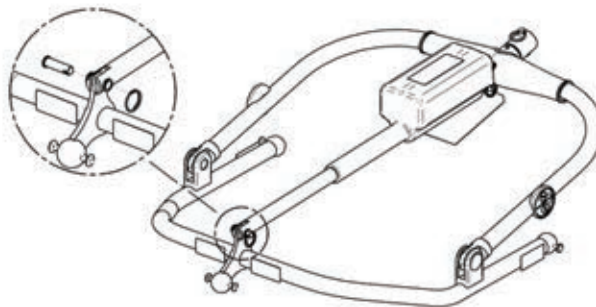

<b>WARNING:</b> Make sure the clevis pin is properly secured by the split ring.
---

# Assembling the DPS

## Installation of the DPS Spreader Bar Interconnection System into the Maxi Sky 600 lift

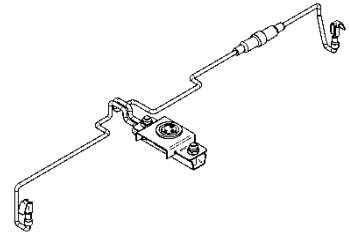

1. Remove the cover from the Maxi Sky 600 lift (picture A).



2. Remove the plastic part from the Maxi Sky 600 cover by pushing on it (pictures B and C).



3. Insert the metal plate that fixes the interconnection system to the lift (as shown on pictures D and E). Wires must be at the rear side of the Maxi Sky 600 cover.





# Assembling the DPS

4. Push the metal plate in place. The interconnection system will lock (pictures F and G).



5. Using an 8 mm socket screwdriver, fix it to the lift.



6. Disconnect the **red/white** wire from the lift and replace it with the DPS spreader bar interconnection system red wire (picture I).




7. Reconnect the red/white wire (of the lift) on the red wire of the adaptor (picture J).

8. Repeat steps 6 and 7 for the **black/white** cable of the lift and the black wire of the interconnection of the DPS spreader bar.

9. Pass the wire through guides in order to prevent it from being wedged (see picture K).

10. Reinstall the Maxi Sky 600 cover.

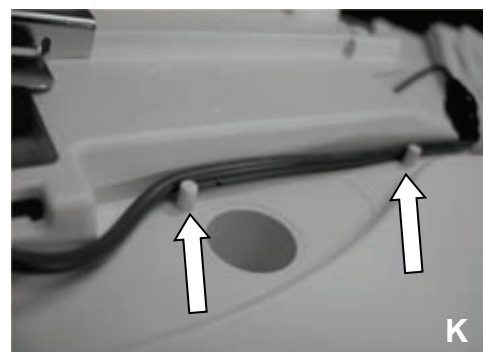


# Assembling the DPS

## Installation of the DPS Spreader Bar on the Maxi Sky 600 Lift

**WARNING:**


Secure the DPS spreader bar to the Maxi Sky 600 using the clevis pin and split ring. Make sure that the spreader bar is correctly fastened and the split ring is in place.

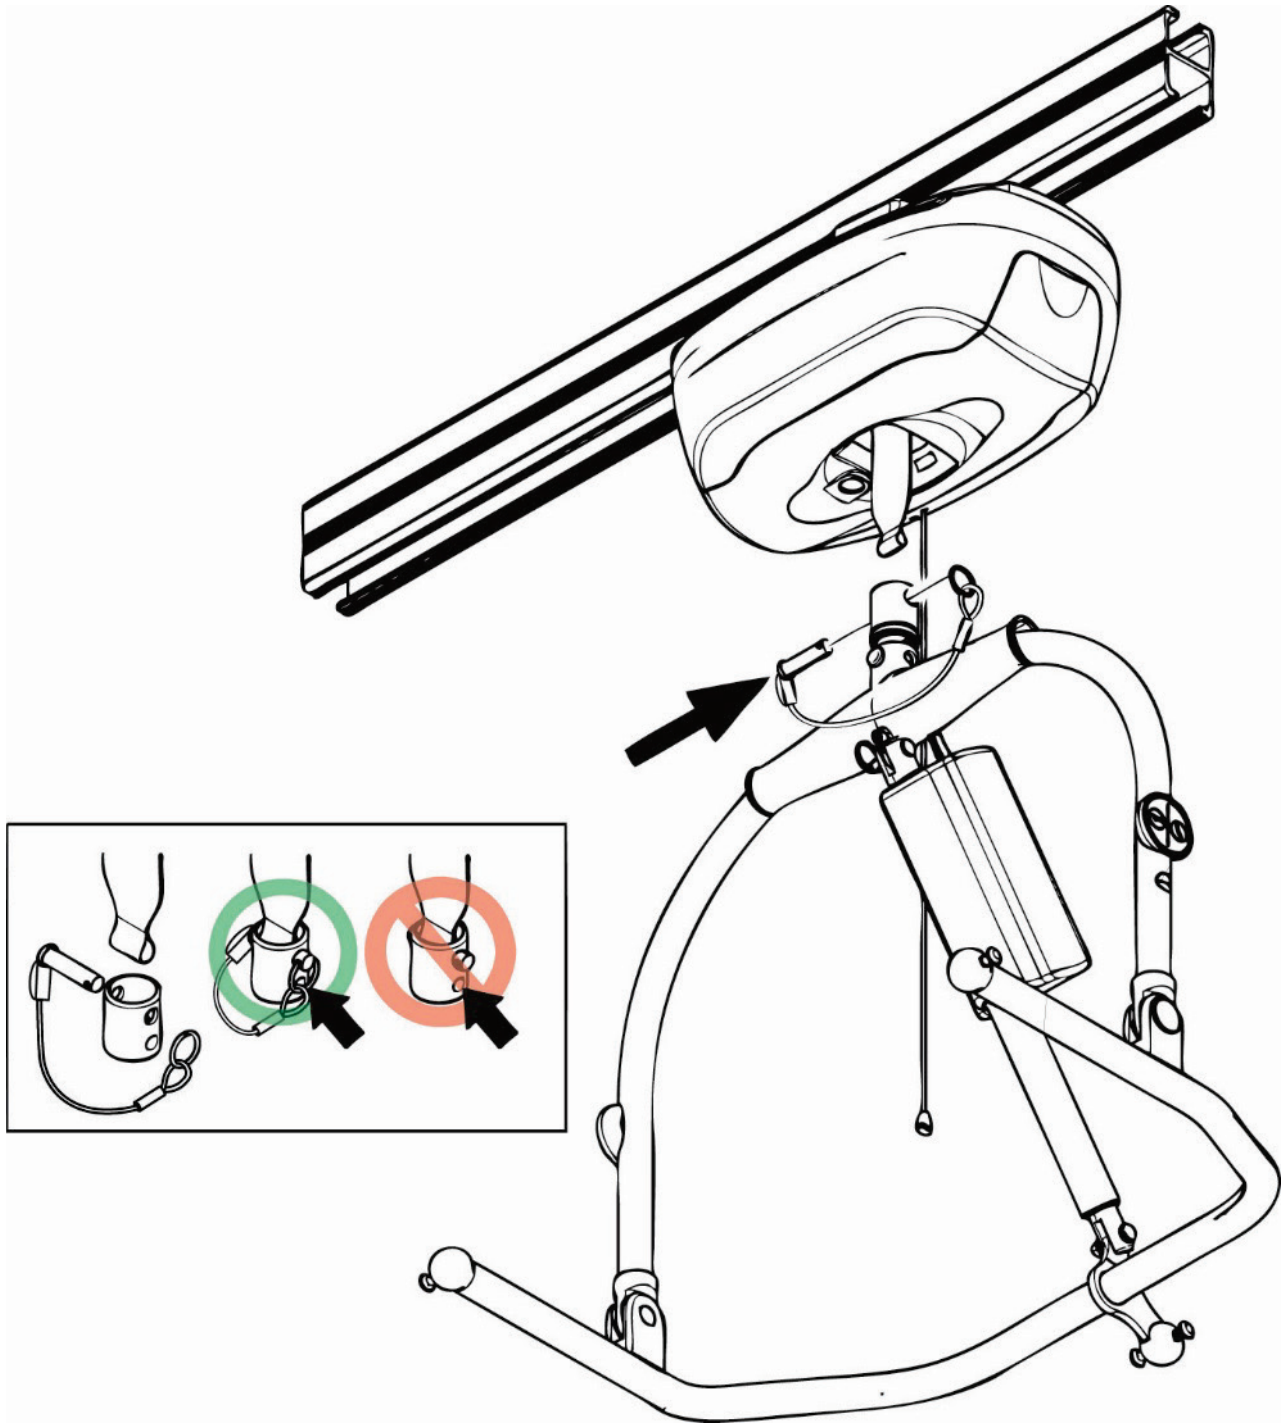

# Assembling the DPS


## Positioning the DPS spreader bar on the Maxi Sky 600 lift

1. Insert the electrical connection for the spreader bar into the lift. To do so, push the DPS connector into the Maxi Sky 600 connector, and then firmly tighten the outer ring by rotating clockwise.

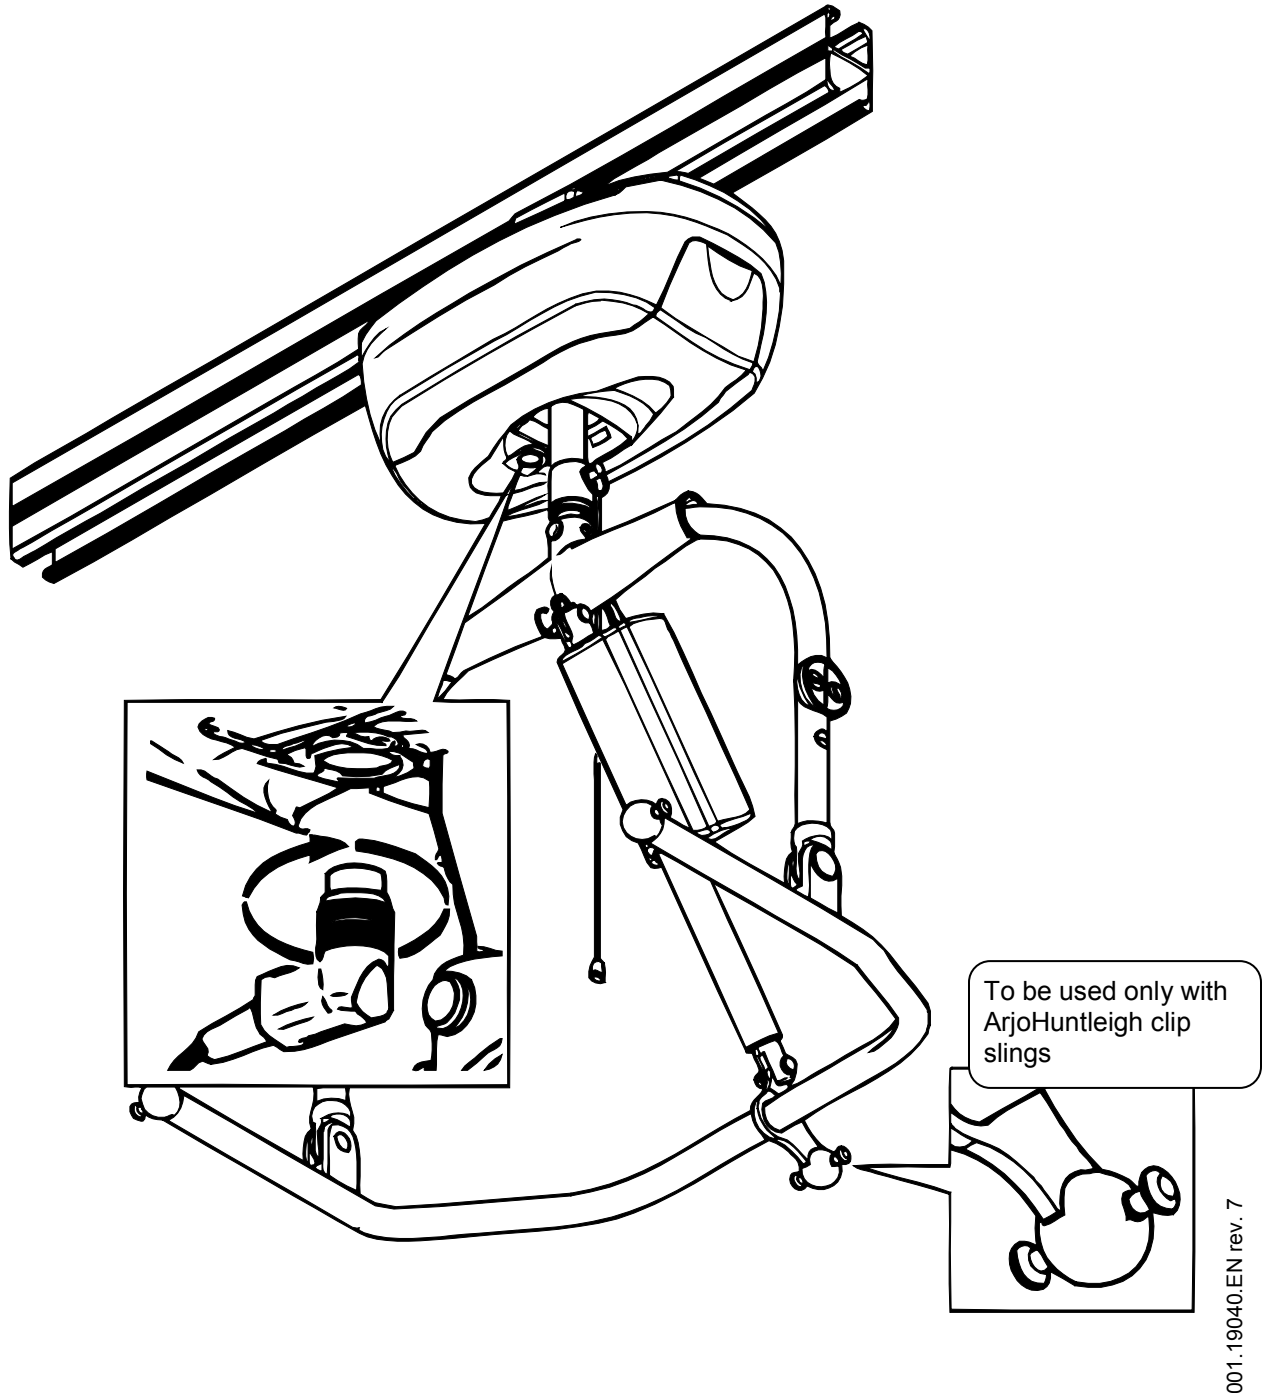

# Operating the DPS Spreader Bar

2. To operate the DPS spreader bar use the touch pads located on either side of the DPS frame. Press and hold the appropriate positioning switch. Select either the reclined position or the sitting position. Release the switch once the desired patient position has been achieved.

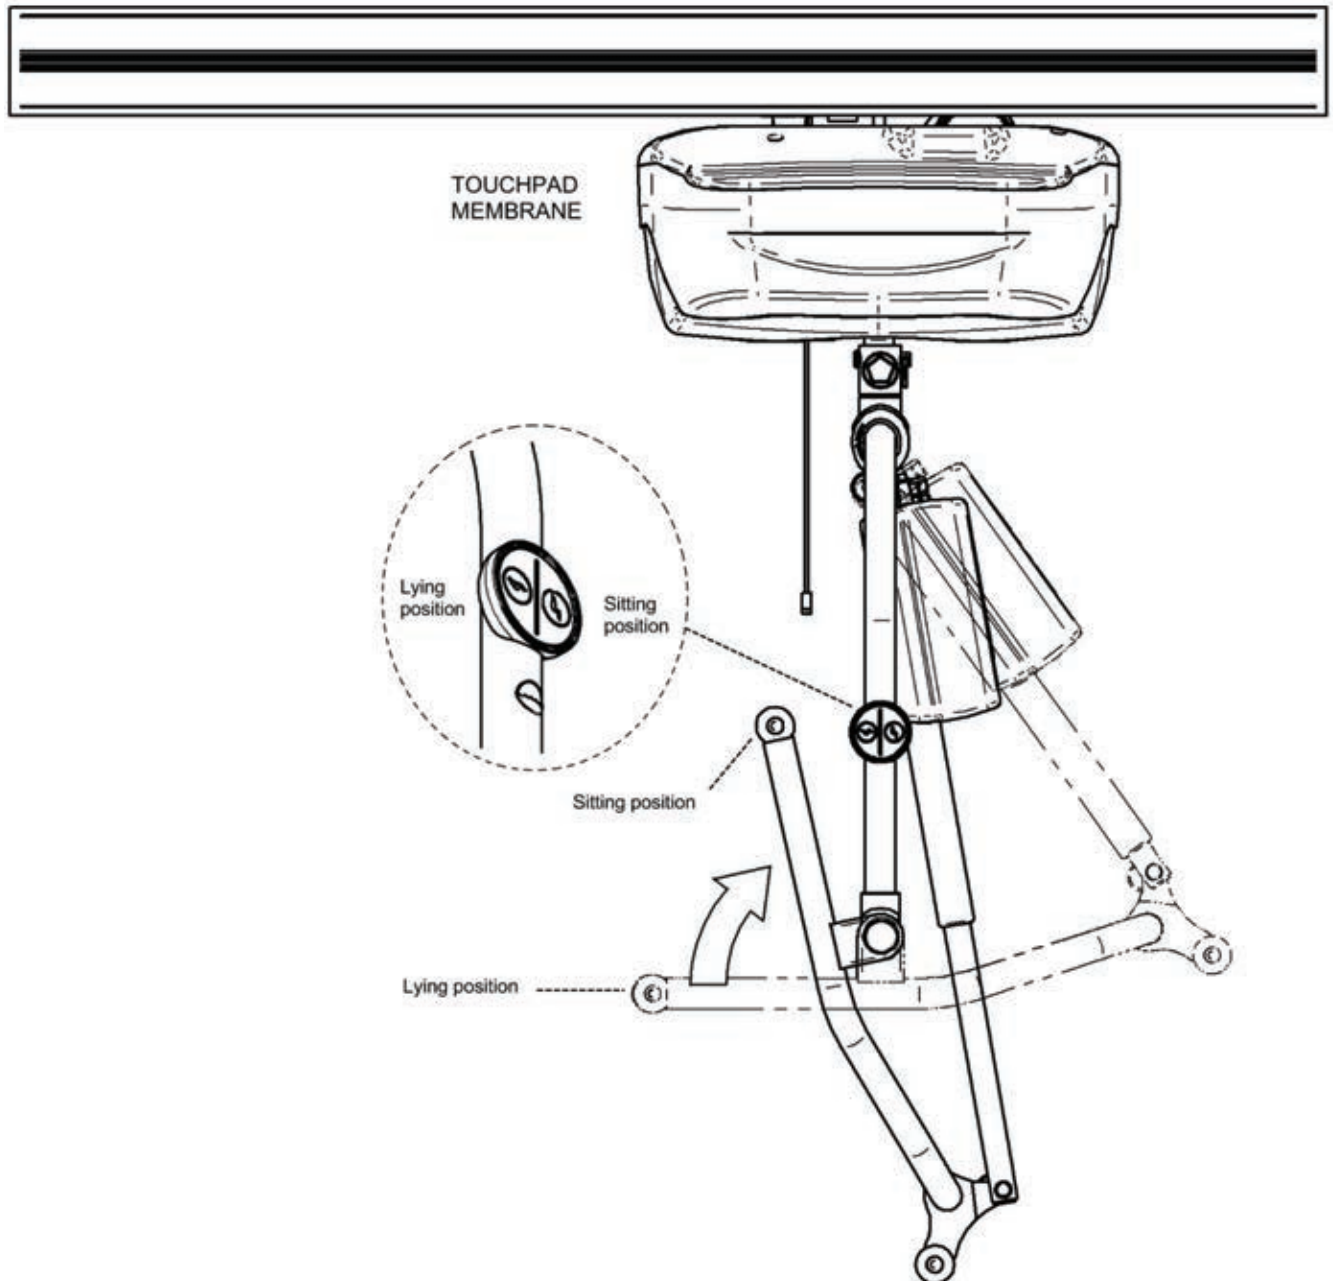


# Operating the DPS Spreader Bar

## Sling Attachment

### WARNING:

Always check that all the sling attachment clips are fully in position before and during the lifting cycle, and in tension as the patient's weight is gradually taken up (see labels near the DPS's sling attachment lugs on the lower frame).

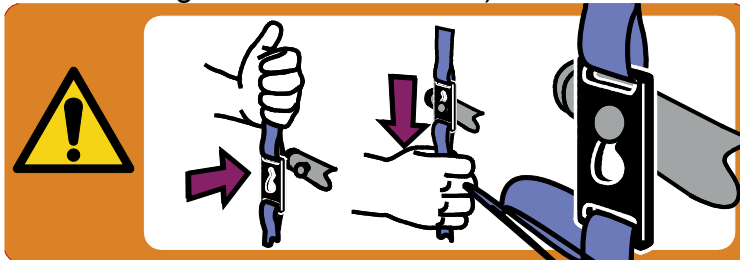

## Straight Attachment

For most patients, the straight attachment of the leg clips is a recommended use (see Figure 1).

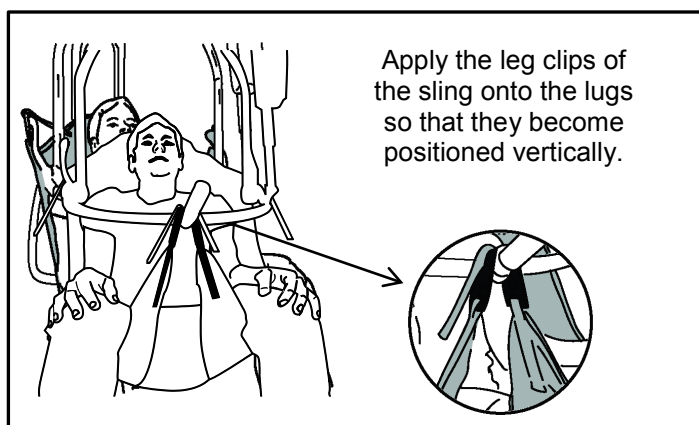


Figure 1

## Crossed Attachment

If the patient is prone to kicking off the leg clip, the crossed attachment of the leg clips shall be applied which will prohibit the clip from being kicked off (see Figure 2).

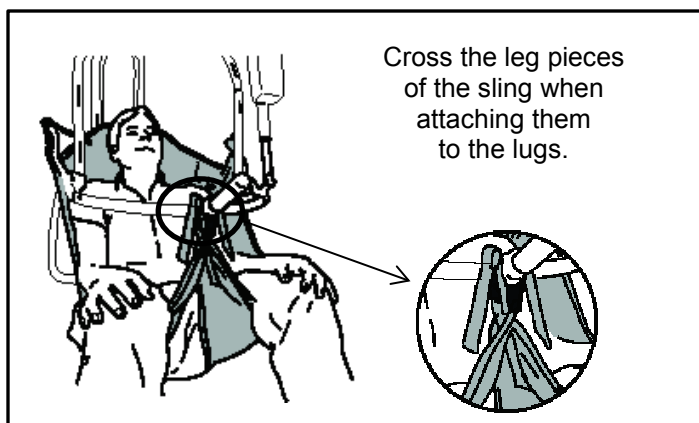


Figure 2

# Maintenance and Cleaning

**WARNING:** ALWAYS CARRY OUT THE DAILY CHECKLIST BEFORE EACH LIFT USE. Alterations made to the DPS spreader bar by someone other than a qualified technician may cause serious injury and void the warranty. The Maxi Sky 600 and its accessories must be inspected ANNUALLY by a qualified technician in addition to the daily and other periodic visual checks specified in this section.

Preventive maintenance specified in this manual can prevent accidents and reduce repair costs. Note all service or repairs to the Maxi Sky 600 or its accessories in the logbook at the end of this manual. Have the document signed by a qualified technician.

## Daily Check List

THE FOLLOWING PROCEDURES MUST BE FOLLOWED BEFORE EACH USE:

- Have the Maxi Sky 600 batteries been charged? Park the lift on the charger whenever the lift is not in use.
- Inspect the DPS spreader bar for any damage or cracks, or if any parts are missing. If this is the case, DO NOT USE IT. Contact your local representative to have the lift serviced.
- Inspect the sling for tears, frayed straps or loose stitches. If the sling has any of the above damage, DO NOT USE IT. Contact your local representative to have the sling replaced.
- Make sure the sling is correctly and securely hooked to the appropriate connection points.
- Ensure the clevis pin and the snap rings that attach the spreader bar to the strap are secured.

## Inspection and Cleaning

Clean the DPS spreader bar with a soft dry cloth, or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of solvent that may damage the finish.

**WARNING:** If using the spreader bar in wet environments do not immerse past the touch panel, it could affect the spreader bar functions.

## Annual Inspection

The lift and its accessories must be inspected annually by a qualified technician.

**WARNING:** The Maxi Sky 600 and its accessories must be serviced every 12 months as a minimum requirement. Do not attempt to do the inspection unless you are qualified to do so. As part of the annual inspection, an annual load test with the safe working load must be performed on the Maxi Sky 600 as required for the CE Mark Maintenance.

# Troubleshooting

---

PROBLEM	VERIFICATION	ACTION ITEM
The DPS spreader bar does not work.	Verify if the batteries of the device where the DPS spreader bar is connected are fully charged.  Is the coil power cable properly connected to the lifter?	Read the user manual of the device where the DPS spreader bar is connected.  If the batteries are fully charged and the coil power cable is properly connected to the device, contact a technician.
The DPS spreader bar operates very slowly.	Verify if the batteries of the device where the DPS spreader bar is connected are fully charged.	If the batteries are fully charged, contact a technician.
One of the buttons of the touchpad membrane does not work.		Contact a technician.

# Log Book

Product Name: DPS SPREADER BAR FOR MAXI SKY 600

Product Serial Number: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_

Warranty Period: \_\_\_\_\_

Distributed by:

## Owner Checklist:

- Ensure the lift is serviced regularly.
- Contact an authorised distributor/service agent immediately if there are any problems with the operation of the device.
- Ensure the logbook is completed and signed.
- Record any repairs required.
- Withdraw the spreader bar from service if inspection reveals that user safety is jeopardised in any way from use of the patient lifter.

## TO BE COMPLETED AFTER EACH SERVICE OR INSPECTION

Service type:   ⇒ Pre-delivery   ⇒ Periodic inspection   ⇒ Minor   ⇒ Major

Condition report:

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Action taken:

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Date :

\_\_\_\_\_

Inspected by:

\_\_\_\_\_  
Printed

\_\_\_\_\_  
Signature

Service type:   ⇒ Pre-delivery   ⇒ Periodic inspection   ⇒ Minor   ⇒ Major

Condition report:

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Action taken:

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Date:

\_\_\_\_\_

Inspected by:

\_\_\_\_\_  
Printed

\_\_\_\_\_  
Signature



# Log Book

Service type:   ⇒ Pre-delivery   ⇒ Periodic inspection   ⇒ Minor   ⇒ Major	
Condition report: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Action taken: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Date:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px;"></div>	Inspected by:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px; display: flex; justify-content: space-between; padding: 0 10px;"> <span>Printed</span> <span>Signature</span> </div>

Service type:   ⇒ Pre-delivery   ⇒ Periodic inspection   ⇒ Minor   ⇒ Major	
Condition report: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Action taken: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Date:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px;"></div>	Inspected by:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px; display: flex; justify-content: space-between; padding: 0 10px;"> <span>Printed</span> <span>Signature</span> </div>

Service type   ⇒ Pre-delivery   ⇒ Periodic inspection   ⇒ Minor   ⇒ Major	
Condition report: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Action taken: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Date:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px;"></div>	Inspected by:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px; display: flex; justify-content: space-between; padding: 0 10px;"> <span>Printed</span> <span>Signature</span> </div>

Service type:   ⇒ Pre-delivery   ⇒ Periodic inspection   ⇒ Minor   ⇒ Major	
Condition report: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Action taken: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Date:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px;"></div>	Inspected by:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px; display: flex; justify-content: space-between; padding: 0 10px;"> <span>Printed</span> <span>Signature</span> </div>

001.19040. EN rev. 7

# Log Book

Service type    ⇨ Pre-delivery    ⇨ Periodic inspection    ⇨ Minor    ⇨ Major	
Condition report: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Action taken: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Date:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px;"></div>	Inspected by:  <div style="display: flex; justify-content: space-between; margin-top: 10px;"> <div style="border-bottom: 1px solid black; width: 45%; text-align: center;">Printed</div> <div style="border-bottom: 1px solid black; width: 45%; text-align: center;">Signature</div> </div>

Service type:    ⇨ Pre-delivery    ⇨ Periodic inspection    ⇨ Minor    ⇨ Major	
Condition report: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Action taken: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Date:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px;"></div>	Inspected by:  <div style="display: flex; justify-content: space-between; margin-top: 10px;"> <div style="border-bottom: 1px solid black; width: 45%; text-align: center;">Printed</div> <div style="border-bottom: 1px solid black; width: 45%; text-align: center;">Signature</div> </div>

Service type:    ⇨ Pre-delivery    ⇨ Periodic inspection    ⇨ Minor    ⇨ Major	
Condition report: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Action taken: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Date:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px;"></div>	Inspected by:  <div style="display: flex; justify-content: space-between; margin-top: 10px;"> <div style="border-bottom: 1px solid black; width: 45%; text-align: center;">Printed</div> <div style="border-bottom: 1px solid black; width: 45%; text-align: center;">Signature</div> </div>

Service type:    ⇨ Pre-delivery    ⇨ Periodic inspection    ⇨ Minor    ⇨ Major	
Condition report: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Action taken: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Date:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px;"></div>	Inspected by:  <div style="display: flex; justify-content: space-between; margin-top: 10px;"> <div style="border-bottom: 1px solid black; width: 45%; text-align: center;">Printed</div> <div style="border-bottom: 1px solid black; width: 45%; text-align: center;">Signature</div> </div>

# Log Book

Service type    ⇨ Pre-delivery    ⇨ Periodic inspection    ⇨ Minor    ⇨ Major	
Condition report: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Action taken: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Date:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px;"></div>	Inspected by:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px; display: flex; justify-content: space-between; padding: 0 10px;"> <span>Printed</span> <span>Signature</span> </div>

Service type:    ⇨ Pre-delivery    ⇨ Periodic inspection    ⇨ Minor    ⇨ Major	
Condition report: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Action taken: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Date:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px;"></div>	Inspected by:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px; display: flex; justify-content: space-between; padding: 0 10px;"> <span>Printed</span> <span>Signature</span> </div>

Service type:    ⇨ Pre-delivery    ⇨ Periodic inspection    ⇨ Minor    ⇨ Major	
Condition report: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Action taken: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Date:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px;"></div>	Inspected by:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px; display: flex; justify-content: space-between; padding: 0 10px;"> <span>Printed</span> <span>Signature</span> </div>

Service type:    ⇨ Pre-delivery    ⇨ Periodic inspection    ⇨ Minor    ⇨ Major	
Condition report: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Action taken: <div style="border-bottom: 1px solid black; height: 15px; margin-bottom: 2px;"></div> <div style="border-bottom: 1px solid black; height: 15px;"></div>	
Date:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px;"></div>	Inspected by:  <div style="border-bottom: 1px solid black; height: 15px; margin-top: 10px; display: flex; justify-content: space-between; padding: 0 10px;"> <span>Printed</span> <span>Signature</span> </div>

001.19040. EN rev. 7







**AUSTRALIA**

ArjoHuntleigh Pty Ltd  
78, Forsyth Street  
O'Connor  
AU-6163 Western Australia  
Tel: +61 89337 4111  
Free: +1 800 072 040  
Fax: +61 89337 9077

**BELGIQUE / BELGIË**

ArjoHuntleigh NV/SA  
Evenbroekveld 16  
BE-9420 ERPE-MERE  
Tél/Tel: +32 (0) 53 60 73 80  
Fax: +32 (0) 53 60 73 81  
E-mail: info.belgium@arjohuntleigh.be

**BRASIL**

Maquet do Brasil  
Equipamentos Médicos Ltda  
Rua Tenente Alberto Spicciati, 200  
Barra Funda, 01140-130  
SÃO PAULO, SP - BRASIL  
Fone: +55 (11) 2608-7400  
Fax: +55 (11) 2608-7410

**CANADA**

ArjoHuntleigh  
90 Matheson Boulevard West  
Suite 300  
CA-MISSISSAUGA, ON, L5R 3R3  
Tel/Tél: +1 905 238 7880  
Free: +1 800 665 4831 Institutional  
Free: +1 800 868 0441 Home Care  
Fax: +1 905 238 7881  
E-mail: info.canada@arjohuntleigh.com

**ČESKÁ REPUBLIKA**

ArjoHuntleigh s.r.o.  
Hlinky 118  
CZ-603 00 BRNO  
Tel: +420 549 254 252  
Fax: +420 541 213 550

**DANMARK**

ArjoHuntleigh A/S  
Vassingerødvej 52  
DK-3540 LYNGE  
Tel: +45 49 13 84 86  
Fax: +45 49 13 84 87  
E-mail: dk\_kundeservice@arjohuntleigh.com

**DEUTSCHLAND**

ArjoHuntleigh GmbH  
Peter-Sander-Strasse 10  
DE-55252 MAINZ-KASTEL  
Tel: +49 (0) 6134 186 0  
Fax: +49 (0) 6134 186 160  
E-mail: info-de@arjohuntleigh.com

**ESPAÑA**

ArjoHuntleigh Ibérica S.L.  
Ctra. de Rubí, 88 1ª planta - A1  
08173 Sant Cugat del Vallés  
ES- BARCELONA 08173  
Tel: +34 93 583 11 20  
Fax: +34 93 583 11 22  
E-mail: info.es@arjohuntleigh.com

**FRANCE**

ArjoHuntleigh SAS  
2 Avenue Alcide de Gasperi  
CS 70133  
FR-59436 RONCQ CEDEX  
Tél: +33 (0) 3 20 28 13 13  
Fax: +33 (0) 3 20 28 13 14  
E-mail: info.france@arjohuntleigh.com

**HONG KONG**

ArjoHuntleigh (Hong Kong) Ltd  
1510-17, 15/F, Tower 2  
Kowloon Commerce Centre  
51 Kwai Cheong Road  
Kwai Chung  
HONG KONG  
Tel: +852 2207 6363  
Fax: +852 2207 6368

**INTERNATIONAL**

ArjoHuntleigh International Ltd  
ArjoHuntleigh House  
Houghton Hall Park  
Houghton Regis  
UK-DUNSTABLE LU5 5XF  
Tel: +44 (0) 1582 745 800  
Fax: +44 (0) 1582 745 866  
E-mail: international@arjohuntleigh.com

**ITALIA**

ArjoHuntleigh S.p.A.  
Via Giacomo Peroni 400-402  
IT-00131 ROMA  
Tel: +39 (0) 6 87426211  
Fax: +39 (0) 6 87426222  
E-mail: Italy.promo@arjohuntleigh.com

**MIDDLE EAST**

ArjoHuntleigh ME  
Office G005 - Nucleotide Complex,  
Dubitech & Research Park,  
P.O.Box 214742, Dubai,  
United Arab Emirates  
Tel: +971 (0)4 447 0942  
E-mail: international@arjohuntleigh.com

**NETERLAND**

ArjoHuntleigh Nederland BV  
Biezenwei 21  
4004 MB TIEL  
Postbus 6116  
4000 HC TIEL  
Tel: +31 (0) 344 64 08 00  
Fax: +31 (0) 344 64 08 85  
E-mail: info.nl@arjohuntleigh.com

**NEW ZEALAND**

ArjoHuntleigh Ltd  
41 Vestey Drive  
Mount Wellington  
NZ-AUCKLAND 1060  
Tel: +64 (0) 9 573 5344  
Free Call: 0800 000 151  
Fax: +64 (0) 9 573 5384  
E-mail: nz.info@ArjoHuntleigh.com

**NORGE**

ArjoHuntleigh Norway AS  
Olaf Helsetts vei 5  
N-0694 OSLO  
Tel: +47 22 08 00 50  
Faks: +47 22 08 00 51  
E-mail: no.kundeservice@arjohuntleigh.com

**ÖSTERREICH**

ArjoHuntleigh GmbH  
Dörrstrasse 85  
AT-6020 INNSBRUCK  
Tel: +43 (0) 512 204 160 0  
Fax: +43 (0) 512 204 160 75

**POLSKA**

ArjoHuntleigh Polska Sp. z o.o.  
ul. Ks Piotra Wawrzyniaka 2  
PL-62-052 KOMORNIKI (Poznan)  
Tel: +48 61 662 15 50  
Fax: +48 61 662 15 90  
E-mail: arjo@arjohuntleigh.com

**PORTUGAL**

ArjoHuntleigh em Portugal  
MAQUET Portugal, Lda. (Distribuidor Exclusivo)  
Rua Poeta Bocage n.º 2 - 2G  
PT-1600-233 Lisboa  
Tel: +351 214 189 815  
Fax: +351 214 177 413  
E-mail: Portugal@arjohuntleigh.com

**SUISSE / SCHWEIZ**

ArjoHuntleigh AG  
Fabrikstrasse 8  
Postfach  
CH-4614 HÄGENDORF  
Tél/Tel: +41 (0) 61 337 97 77  
Fax: +41 (0) 61 311 97 42

**SUOMI**

ArjoScandinavia Ab / ArjoHuntleigh Finland  
Niittykatu 8  
FI- 02200 ESPOO  
Puh: +358 9 8870 120  
E-mail: info@vestek.fi

**SVERIGE**

ARJO Scandinavia AB  
Hans Michelsensgatan 10  
SE-211 20 MALMÖ  
Tel: +46 (0) 10 494 7760  
Fax: +46 (0) 10 494 7761  
E-mail: kundservice@arjohuntleigh.com

**UNITED KINGDOM**

ArjoHuntleigh UK  
ArjoHuntleigh House  
Houghton Hall Park  
Houghton Regis  
UK-DUNSTABLE LU5 5XF  
Tel: +44 (0) 1582 745 700  
Fax: +44 (0) 1582 745 745  
E-mail: sales.admin@arjohuntleigh.com

**USA**

ArjoHuntleigh Inc.  
2349 W Lake Street Suite 250  
US-Addison, IL 60101  
Tel: +1 630 307 2756  
Free: +1 800 323 1245 Institutional  
Free: +1 800 868 0441 Home Care  
Fax: +1 630 307 6195  
E-mail: us.info@arjohuntleigh.com

REV 18: 09/2016

---

## GETINGE GROUP

**Geringe Group** is a leading global provider of products and systems that contribute to quality enhancement and cost efficiency within healthcare and life sciences. We operate under the three brands of **ArjoHuntleigh**, **Geringe** and **Maquet**. **Geringe** provides solutions for infection control within healthcare and contamination prevention within life sciences. **Maquet** specializes in solutions, therapies and products for surgical interventions, interventional cardiology and intensive care.

---

## ARJOHUNTLEIGH GETINGE GROUP

ArjoHuntleigh focuses on patient handling and hygiene, disinfection, DVT prevention, medical beds, therapeutic surfaces and diagnostics.



ArjoHuntleigh AB  
Hans Michelsensgatan 10  
211 20 Malmö, Sweden  
[www.arjohuntleigh.com](http://www.arjohuntleigh.com)

